




# How to locate your Recorder's IP address

## Looking to find out what the IP address is of your recorder?

### Solution:


1. Enter Menu Setup;

Right click mouse and select menu;

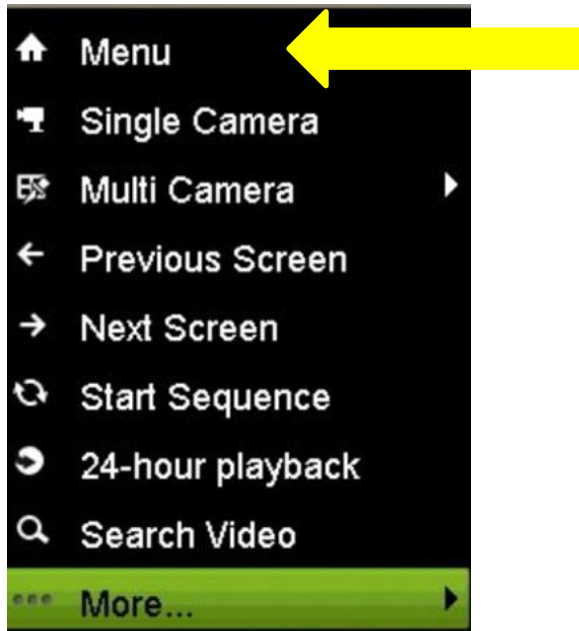

2. Log in with your normal user credentials.

3. At the top of the screen select Information and Network.

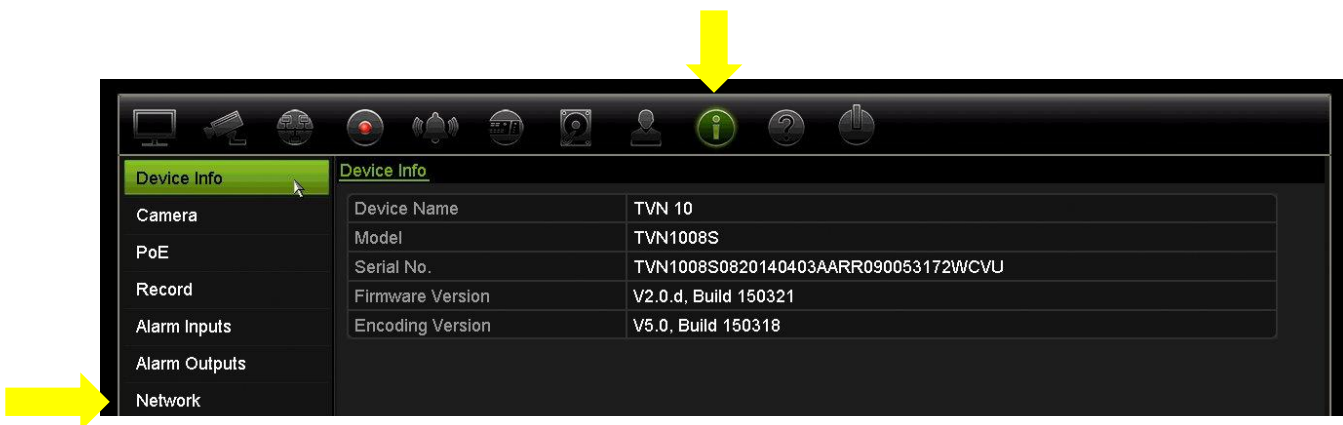



4. The IP address of the recorder will be displayed on this page.



## Preparing your network for remote viewing

### Looking to view your CCTV system remotely?

#### Solution:

In order to be able to access your CCTV system remotely (smart phone, tablet, or computer outside of your network), the following ports *within* your network need to be forwarded to the IP address in the NVR.

This is typically done by your network administrator, or an IT professional.

**Port 80\*, 8000\*, 554\*, 1024 (mandatory), 7200\***

*\*Should these ports be already in use, please program an alternative (such as 81, 8001, 555, and 7201)*

*Any changes in ports have to be reprogrammed on the recorder.*