

## Setting up TruVision Navigator for CCTV Remote Viewing

1. Ensure you have the latest version of TruVision Navigator downloaded on your computer:

### Windows Computer:

# http://www.interlogix.com/video/product/truvision-navigator-v7

### Click on 'downloads' and then on 'TruVision Navigator 7.0 Software'

Overview	Standard Features	Downloads	Ordering Information
Software			
TruVision NVR St	torage and Bandwidth C	lculator	
TruVision Naviga	tor 7.0 Software		

#### Apple Devices (note: HD is for tablets only):



### Android Devices (note: HD is for tablets only):



2. Access the DDNS information on your NVR under "configuration"

Configuration	DDNS		
Browser Configuration	DDNS		
<ul> <li>Remote Configuration</li> <li>OSD Display Settings</li> </ul>	Enable DDNS		
🖬 🕕 Camera Setup	DDNS Type:	ezDDNS	~
Network Settings			2000 1
Network Settings	Server Address:	www.tvr-ddns.net	
> PPPOE			20 
···· > DDNS	Host Name:	myhouse	
> NTP			
> Email			



3. The Server Address + Host Name is the URL to be entered in the remote computer or device. From the example listed in step 2, it would be <u>www.tvr-ddns.net/myhouse</u>

Recorder Type:       TruVision Recorder         Recorder Title:       Home         Recorder Address:       www.tvr-ddns.net/myhouse         Recorder Port:       8000
Recorder Title:       Home         Recorder Address:       www.tvr-ddns.net/myhouse         Recorder Port:       8000
Recorder Address:       www.tvr-ddns.net/myhouse         Recorder Port:       8000
Recorder Port: 8000
Streaming Type: TCP -
Usemame: Input user name
Password: Input password
Add Recorder Offline
OK Cancel

Apple Device

Windows Computer

4. You are now setup to remotely view your CCTV system. Should you require additional assistance, please contact our Service Team to schedule a technician to assist you in setting this up.